



4900IA/4950IA

Steam Wand

Reliable. Getting it Right. For You.

At Reliable, we do what we love, and we take pride in doing it right. You want what's best for the people, places and things that matter in your life—from where you live to what you wear. So do we. That's why we approach every product with a laser-focus on you. In our commitment to quality, functionality, design and customer service, we are continuously innovating to find solutions to better fit your needs. Everything we make looks and feels just right, because it is. We get it right. For you.

For your safety and to fully enjoy the advantages of this product, please take a few minutes to read all the important safeguards and care instructions. Keep this manual handy and review the product warranty for your reference.

Thank you for your purchase. Please share your Reliable product experience by posting an online review on the website from which you purchased. We greatly appreciate it.

Important Safety Instructions – Save These Instructions in a Safe Place For Future Reference

Read all instructions before use.

1. To protect against the risk of electric shock, do not immerse the appliance in water.
2. Do not allow the cord to touch hot surfaces.
3. Always allow the appliance to cool for at least thirty minutes before storing.
4. Always put the appliance in a secure place on a table or counter when using.
5. Do not remove the appliance without unplugging it from the boiler first.
6. Always disconnect the appliance when not in use.
7. Do not use the appliance if the cord is damaged. Return the appliance or have the cord repaired by the manufacturer, or their service agent.
8. Do not operate the appliance if it has been dropped or damaged. Do not disassemble the appliance. Incorrect reassembly can cause a risk of personal injury. Send it to an authorized service center for repair.
9. Be careful. Burns can occur from touching hot metal parts or steam.
10. Keep out of reach of children.
11. Always turn the steam button on the boiler OFF before disconnecting the steam gun from the boiler unit.
12. Only use the steam wand for its intended use.

Important: When you want to dispose of the appliance, NEVER throw it in the garbage. Instead, go to your closest recycling station or waste collection centre for subsequent treatment. In this way, you will be contributing to looking after the environment.

Description of the Steam Wand



Specifications

4900IA Steam Wand

Electrical 120V

Steam Hose 9 ft.

Wattage 500W

4950IA Steam Wand


Electrical 220V

Steam Hose 9 ft.


Wattage 500W

Parts Drawing

 4900IA

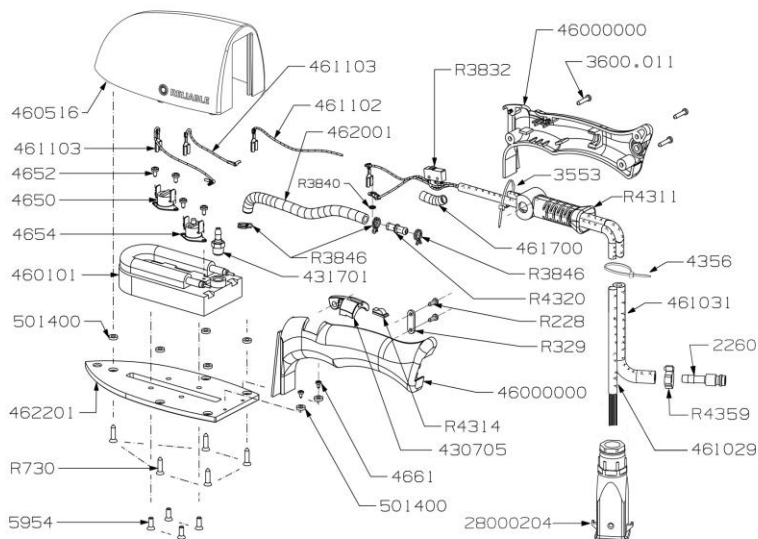

Electrical diagram

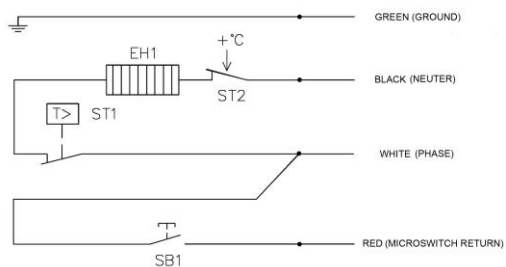 

- ST1** Thermostat
- EH1** Heating element
- ST2** Thermostat with manual reset
- SB1** Microswitch button


Parts List

4900IA


Cod.	Description
2260	<i>Steam joint</i>
28000204	<i>ILME plug</i>
3553	<i>Cable tie</i>
3600.011	<i>Screw</i>
430705	<i>Microswitch button</i>
431701	<i>Steam fitting</i>
4356	<i>Cable tie</i>
46000000	<i>Handle</i>
460101	<i>Sole plate 120V</i>
460516	<i>Cover with logo Reliable</i>
461029	<i>Power cord</i>
461031	<i>Steam hose</i>
461102	<i>Electric wire</i>
461103	<i>Electric wire</i>
461700	<i>Sheath</i>
462001	<i>Silicone hose</i>
462201	<i>Ironing sole plate</i>
4650	<i>Thermostat</i>
4652	<i>Screw</i>
4654	<i>Thermostat with manual reset</i>
4661	<i>Screw</i>
501400	<i>Insulation washer</i>
5954	<i>Screw</i>
R228	<i>Screw</i>
R329	<i>Clamp</i>
R3832	<i>Microswitch</i>
R3840	<i>Washer</i>
R3846	<i>Clamp</i>
R4311	<i>Fairlead</i>
R4314	<i>Slide key</i>
R4320	<i>Steam joint</i>
R4359	<i>Clamp</i>
R730	<i>Screw</i>

Parts Drawing

 4950IA

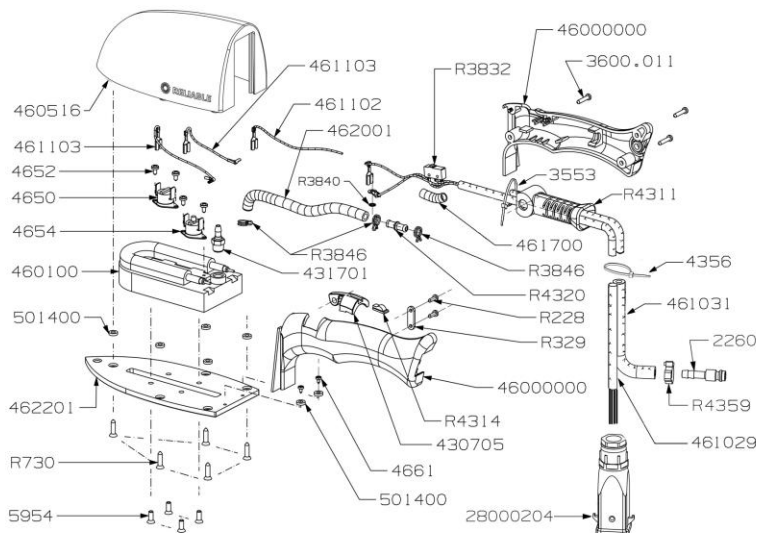

Electrical diagram

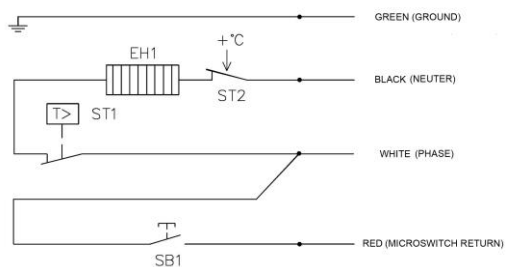 

- ST1** Thermostat
- EH1** Heating element
- ST2** Thermostat with manual reset
- SB1** Microswitch button

Parts List

4950IA

Cod.	Description
2260	<i>Steam joint</i>
28000204	<i>ILME plug</i>
3553	<i>Cable tie</i>
3600.011	<i>Screw</i>
430705	<i>Microswitch button</i>
431701	<i>Steam fitting</i>
4356	<i>Cable tie</i>
46000000	<i>Handle</i>
460100	<i>Sole plate</i>
460516	<i>Cover with logo Reliable</i>
461029	<i>Power cord</i>
461031	<i>Steam hose</i>
461102	<i>Electric wire</i>
461103	<i>Electric wire</i>
461700	<i>Sheath</i>
462001	<i>Silicone hose</i>
462201	<i>Ironing sole plate</i>
4650	<i>Thermostat</i>
4652	<i>Screw</i>
4654	<i>Thermostat with manual reset</i>
4661	<i>Screw</i>
501400	<i>Insulation washer</i>
5954	<i>Screw</i>
R228	<i>Screw</i>
R329	<i>Clamp</i>
R3832	<i>Microswitch</i>
R3840	<i>Washer</i>
R3846	<i>Clamp</i>
R4311	<i>Fairlead</i>
R4314	<i>Slide key</i>
R4320	<i>Steam joint</i>
R4359	<i>Clamp</i>
R730	<i>Screw</i>

Limited 1 year warranty

Reliable Corporation ("Reliable") warrants to original purchaser of its products that every product sold by Reliable (a "Reliable Product") is free from defects in material and workmanship for a period of one year from the date of purchase if properly used and maintained. Subject to the conditions and limitations set forth below, Reliable will either repair or replace any part of a Reliable Product that proves defective by reason of improper workmanship or materials. If the defective Reliable Product is no longer available and cannot be repaired effectively or replaced with an identical model, Reliable shall replace the defective Reliable Product with a current Reliable Product of equal or greater value. Repaired parts or replacement products will be provided by Reliable on an exchange basis, and will be either new or refurbished to be functionally equivalent to new. If Reliable is unable to repair or replace a Reliable Product, it will refund the current value of that Reliable Product at the time the warranty claim is made.

This limited warranty does not cover any damage to a Reliable Product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, wear and tear resulting from normal use of the product, or any unauthorized disassembly, repair, or modification. This limited warranty does not extend to any indirect, consequential or incidental damages that may be suffered by a user or from the use of a Reliable Product, including without limitation, any liability for third party claims for damage, and is limited to the amount paid by the original purchaser Reliable Product with respect to which this limited warranty protection applies. This limited warranty does not apply with respect to products that have been altered or which are missing serial numbers or for products not purchased directly from Reliable or a dealer authorized by us to sell Reliable Products.

This limited warranty is the only warranty that applies to any Reliable Product, supersedes any and all terms that may be contained in any other document or purchase order and may not be altered or amended except expressly in writing by Reliable.

To obtain a repair or replacement under the terms of this warranty, please contact our customer service group at 1-800-268-1649 or at support@reliablecorporation.com.

You will be required to submit an original receipt via fax or e-mail. The receipt must reflect that you are the original purchaser, the product was bought directly from us or from an authorized Reliable dealer and that the warranty claim is being made within the warranty period. You will be issued a return authorization number (RA#) and asked to ship the defective product together with proof of purchase and RA#, prepaid insured to the following address:

Reliable Corporation, 5-100 Wingold Avenue, Toronto, ON M6B 4K7. Freight collect shipments will be refused. The risk of loss or damage in transit will be borne by the customer. Once Reliable receives the defective product, it will initiate the repair or replacement process.

If you have any questions regarding this warranty, you may write to:

Reliable Corporation
100 Wingold Avenue, Unit 5
Toronto, Ontario
Canada M6B 4K7
www.reliablecorporation.com



1 800 268 1649
www.reliablecorporation.com

30072026