


 **RELIABLE**

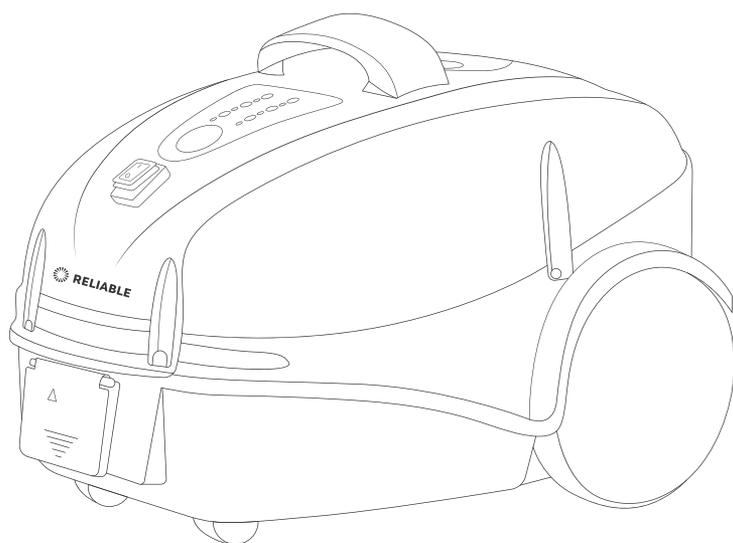

1000CC

Brio Pro Steam Cleaner

The Brio Pro 1000CC
Steam Cleaner
Instruction Manual
English



Do Not Return To Store
Contact Us First

For immediate help with your purchase, please give us a call so that we can resolve your issue.

We can be reached toll-free at 1-800-268-1649 or email support@reliablecorporation.com


Reliable. Getting it Right. For You.

At Reliable, we do what we love, and we take pride in doing it right. You want what's best for the people, places and things that matter in your life—from where you live to what you wear. So do we. That's why we approach every product with a laser-focus on you. In our commitment to quality, functionality, design and customer service, we are continuously innovating to find solutions to better fit your needs. Everything we make looks and feels just right, because it is. We get it right. For you.

For your safety and to fully enjoy the advantages of this product, please take a few minutes to read all the important safeguards and care instructions. Keep this manual handy and review the product warranty for your reference.

Thank you for your purchase. Please share your Reliable product experience by posting an online review on the website from which you purchased. We greatly appreciate it.

Video Library: Reliable Brio Pro 1000CC

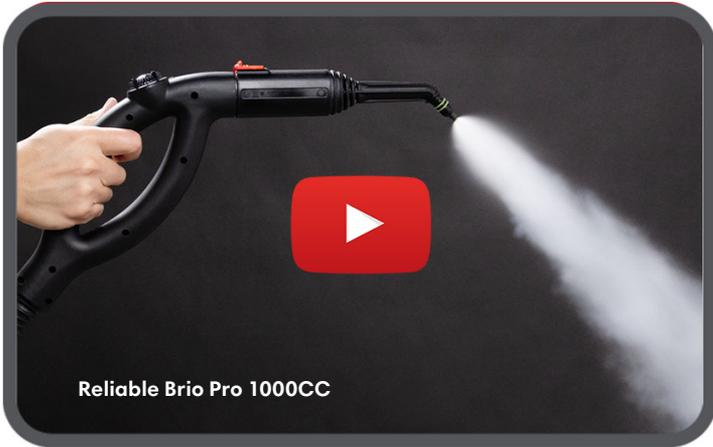

Want to see your **Brio Pro 1000CC** in action? Scan the **QR code** below to visit our YouTube channel and explore our video library.



Scan to explore our video library.

Stay up to date with the latest tips, tricks, and tutorials! Subscribe to our channel so you never miss a new video.



Scan to subscribe to the Reliable YouTube Channel.

Happy cleaning!

Important Safety Instructions – Save These Instructions in a Safe Place For Future Reference

Read all instructions before use.

When using your Brio Pro steam cleaner, basic safety precautions should always be followed. Please read the following instructions carefully as they provide important information concerning how to install, use and care for this product. The appliance generates high temperature steam. Always handle with care and warn other users of potential danger.

- To protect against a risk of electric shock, do not immerse the steam cleaner in water or any other liquids.
- The steam cleaner should always be turned OFF before plugging it into or unplugging from a wall outlet. Never pull the power cord to disconnect from the outlet; instead grasp the plug and pull to disconnect.
- Do not let the power cord touch hot surfaces. Let the steam cleaner cool completely before putting it away. Wrap the power cord around the posts that are positioned in the rear of the steam cleaner when not in use.
- Do not operate the steam cleaner with a damaged cord, plug, or if the steam cleaner has been dropped or damaged. This will void any and all warranties. Please contact the place of purchase for repair procedure.
- Close supervision is necessary for any appliance being used by or near children. Do not leave the steam cleaner on while unattended.
- Do not use this unit in the presence of explosive and/or flammable fumes.
- Keep ventilation slots free from dust.
- Never drop or insert any object into ventilation slots
- To prevent overheating, unravel the electrical cord completely.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from the main power.
- Never put away your steam cleaner while it is still hot. There is no need for emptying the tank unless you intend to leave it unused for a long period of time.
- This product is intended for household or commercial use.
- Before turning on the steam cleaner, please ensure that the water tank is full.

- This product is grounded for your safety. If you must use an extension cord, make sure it is rated at least 15 amps, and is grounded.
- Never store the appliance in an area that is likely to freeze.
- A hydraulically operated safety pressure relief valve is fitted inside the appliance, it MUST only be replaced by authorised service personnel with an identical valve to prevent a safety hazard.
- The steam generator is fitted with a safety overload cut-out that MUST only be reset or replaced with an identical component by authorised service personnel to prevent a safety hazard
- Every time the steam generator heats up from cold, the air inside the appliance prevents steam from being delivered immediately. After one minute of heating up set the steam regulation knob to maximum position and push-button under pistol grip, to expel this air
- Never put detergents, perfumes or any other chemical substances in the water tank.

Electrical Instructions

To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit simultaneously with the steam cleaner. If an extension cord is necessary, a 15-amp rated cord with a polarized plug should be used. Cords rated for less may overheat and cause damage.

Water Instructions

Your steam cleaner has been planned for use with normal tap water. In order to extend the life of this product, if where you are living the level of water hardness is very high, we recommend using 50% of normal water with 50% of distilled water.

Test First, Then Clean

Prior to cleaning, test the surfaces to be steam cleaned.

Description of the Steam Cleaner

Main Unit

1. Main Switch
2. Main Panel
3. Electrical Cord
4. Water Tank Cap
5. Carrying Handle
6. Wheels
7. Flexible Hose Connecting Outlet



Accessories with Steam Cleaner

- 8. Rectangular Floor Brush
- 9. Triangular Brush with Black Polyester Bristles
- 10. Black Upholstery Scraper
- 11. Funnel
- 12. 30 mm Small Brush with Black Polyester Bristles
- 13. 30 mm Small Brush with Brass Bristles
- 14. 30 mm Small Brush with Stainless Steel Bristles
- 15. Extension Wands
- 16. Nozzle with Brass Tip
- 17. 2.45m Flexible Hose
- 18. Pad for Triangular Brush
- 19. Allen Key
- 20. Pad for Rectangular Brush
- 21. Towel



1000CC Optional Accessories*



1. 38mm Brass Brush
2. 38mm Nylon Brush
3. 38mm Stainless Steel Brush
4. 60mm Black Nylon Brush
5. 60mm Red Nylon Brush
6. Drain Cleaning Attachment
7. Rectangular Stainless Steel Brush
8. Rectangular Nylon Brush
9. Rectangular Brass Brush
10. Sanisteam Wall Mop
11. Sanisteam Floor Mop
12. 42cm Extension Tube
13. High Pressure Steam Nozzle (Grey)
14. SaniSteam Microfiber Floor Mop Pad
15. SaniSteam Microfiber Wall Mop Pad
16. 11.5cm Steam Nozzle Extension
17. Weed Attachment
18. Window Squeegee

*The optional accessories can be purchased separately through reliablecorporation.com

Brio Pro 1000CC Setup and Operations Instructions

Filling the Water Tank

1. Remove the water tank cap (4).
2. Fill the tank with up to 3L of water (10–11 cups).
3. Secure the cap until snug.

Connecting Power and Accessories

4. Plug the electrical cord into a main power outlet.
5. Attach the flexible steam hose to the steamer (7).
6. Slide on the appropriate accessories to the other end of the hose.

Note: If the attachment connections dry up after intensive use, put a small amount of lubricant (Vaseline) around the O-rings on the male attachment.


Powering On

7. Turn the main power switch (1) from “O” to “|”.
 - The switch light will turn on.
 - You may hear a buzzing sound. This is the pump drawing water to the boiler (normal operation).
8. Wait for the Steam Ready Light (A) to come on. The unit is now pressurized and ready for use.

Note: When calling for steam at the beginning of each use, you may notice a rapid decrease in the pressure to the unit. This is normal as the air in the unit is being voided, and should only last for a short period of time at the beginning of each use.

Features

- A. Steam Ready Light
- B. Low Water Control Light
- C. Steam Regulation Light 1
- D. Steam Regulation Light 2
- E. Hot Water Injection Light
- F. Pressure Gauge

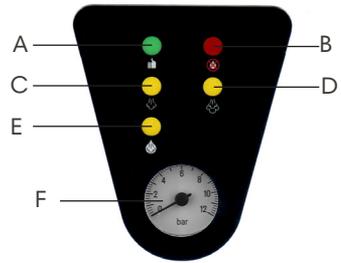

- **Steam Ready Light (A)**

A green light signals that the steam has reached the maximum working pressure and the unit is ready to be used.

- **Low Water Control Light (B)**

A red low water warning light signals that the water tank needs to be refilled. If you wish to continue steam cleaning, unscrew the water tank cap (4) and refill the tank.

- **Pressure Gauge (F)**

The pressure gauge on the unit shows the current steam pressure level. When it reaches 6 BAR, it is ready for use.



Steam Regulation Lights and Hot Water Injection Light

Brio Pro 1000CC comes with a steam hose, which has a dial that indicates 4 different levels of steam. Each level of steam triggers one of the three lights on the main unit.

- **Steam Regulation Light 1 (C)**
- **Steam Regulation Light 2 (D)**
- **Hot Water Injection Light (E)**

Steam Levels

- **Level 1, Suitable for Light Cleaning**

When the dial is set to Level 1 on the hose, the **Steam Regulation Light 1 (C)** on the main unit illuminates, signaling the minimum steam output of 49 grams per minute.

- **Level 2, Suitable for Regular Cleaning**

When the dial is set to Level 2 on the hose, the **Steam Regulation Light 2 (D)** on the main unit illuminates, signaling the steam output of 54 grams per minute.

- **Level 3, Suitable for Cleaning Stubborn Dirt or Grime**

When the dial is set to Level 3 on the hose, the **Steam Regulation Light 1 and 2 (C+D)** on the main unit illuminates, signaling the steam output of 56 grams per minute.

- **Level 4, Suitable for Rinsing**

When the dial is set to Level 4 (marked red) on the hose, the **Hot Water Injection Light (E)** on the main unit illuminates, signaling the steam output of 228 grams per minute.

Please note in this position, the steam pressure and water level will go down much more quickly than if steam only is being used.

Refilling During Use

1. Turn power OFF and unplug the unit.
2. Unscrew the water tank cap (4).
3. Refill with water (up to 3L).
4. Replace the tank cap securely.

If you're using the trolley with the external water bottle connected to the water tank cap, follow the same steps listed above but directed to the water bottle.

Shutdown and Storage

1. Turn main switch (1) to the "O" position.
2. Unplug from the power outlet.
3. Allow the unit to cool down fully before storing.
4. If storing for over 3 months, drain the steam generator tank (see below).

Note: Do not store the unit where temperatures may drop below freezing, residual water may damage internal components.

Draining the Steam Generator Tank

Only drain when the unit is completely cool and unplugged.

1. Ensure the unit is unplugged and the hose is disconnected.
2. Carefully turn the unit upside down.
3. Unscrew the drainage cap at the bottom of the machine.
4. Use the allen key (19) to open the boiler drainage plug. Flip the unit to allow water to drain completely.
5. Once empty, close the drain nut and replace the cap.

Boiler Maintenance (Descaling)

Recommended: Clean the boiler 1–2 times per year (more, if using hard water).

Descaling Steps

1. Ensure the machine is unplugged, depressurized, and completely cool.
2. Remove the drainage cap with a coin.
3. Unscrew the brass boiler nut with the included allen key (19).
4. Mix warm water with descaling powder (available at reliablecorporation.com).
5. Pour the mixture into the boiler through the bottom opening.
6. Let it sit for 24 hours.
7. Rinse thoroughly with clean water. Close the drain and place the cap securely.

Note: If you see that the water that is coming out from the boiler is full of dirt/limestone, we suggest that you repeat this operation more frequently, perhaps three to four times per year.

Using the Accessories

Connecting the Accessories

1. Lift the hinged cover (7) on the lower front of the steam generator.
2. Connect the hose plug: Press the red button on the hose plug connector (16) and push firmly until you hear a "click," indicating the hose is securely inserted.
Note: The hose must be properly connected. If not, the solenoid valve will not work, and steam will not flow through the hose or attachments.
3. Activate the steam: Press the button located on the underside of the handle to deliver steam.

Large Rectangular Floor Brush

For cleaning hard floors:

4. Attach the extension tubes (15) to the angle adapter to use the large rectangular brush (8).
5. For optimal cleaning, attach a dry cloth to the brush when cleaning hard floors or carpet.

Triangular/Upholstery Brush

The triangular brush (9) is used where it is impossible or awkward to use the large brush.

Upholstery, Drapery, Bedding, Etc.

1. Cover the brush with a clean dry cloth fixing it through the spring.
2. Use a rapid back and forth motion, but avoid oversaturating the material with steam.

Important: Prior to cleaning, do a patch test in an area that is not easily seen before you begin. Steam and moisture may cause damage to some surfaces.

High Pressure Nozzle with Small Round Brush (Nylon, Brass, Stainless Steel)

1. **Using the nozzle:** You can use the high-pressure nozzle with or without one of the small round brushes. For delicate surfaces, it's best to use the nozzle alone.
2. Choosing the right brush:
 - **Nylon brush:** Least abrasive; ideal for cleaning grout, sinks, and light scrubbing tasks.
 - **Brass brush:** Slightly more abrasive, ideal for tougher cleaning tasks but can scratch sensitive surfaces. Be cautious.

- **Stainless steel brush:** Most abrasive; recommended for heavy-duty jobs like caked-on grease, rust, and very dirty grout.

Tip: Start with the nylon brush for gentle cleaning and only move to the brass or stainless steel brush if necessary.

3. Where to use the nozzle and brushes:

- Great for cleaning and degreasing working surfaces, oven doors, ventilation hoods, sinks, bathtubs, taps, doors, metal frames, and more.
 - The nylon brush is especially useful for delicate surfaces and grout.
 - Brass and stainless steel brushes can tackle tougher stains but should be used carefully to avoid scratching.
4. **Cleaning tip:** Always have a cloth handy to wipe away moisture and dirt after using the steam nozzle.

Specifications


Electrical 120V	Wattage 1750W
Water Tank Capacity 3.1 L	Working Pressure 6 BAR
Boiler Capacity 1.6 L	Continuous Steam System (CSS) Yes
Steam Regulations 3	Safety Valve Yes
Hot Water Injection Yes	Limestone Magnetic Filter Yes
Certifications cETLus	

Troubleshooting

Do not operate the steam cleaner with a damaged electrical cord, plug or if the steam cleaner has been dropped or damaged. To avoid risk of electric shock, do not disassemble or attempt to repair the unit on your own. Return the unit to Reliable Corporation (see warranty) for examination repair.

Problem	Possible Causes	Remedy
No steam is released through the steam fittings.	<ol style="list-style-type: none"> 1. Steam unit is not turned on. 2. Water tank is empty. 3. Unit is not plugged in. 4. Generator is not fully heated. 	<ol style="list-style-type: none"> 1. Turn on main switch (1) 2. If the red light (B) is flashing on and off and you can hear a noise, fill up the tank. 3. Plug unit into outlet 4. Wait for the green light (A) to turn on.
Water drops leak from the attachments.	<ol style="list-style-type: none"> 1. Unit is not fully heated. 2. Condensation was created from non-use. 	<ol style="list-style-type: none"> 1. Wait for light (A) to turn on. 2. Let water run through system until steam comes out.
Dirty water is coming out.	Scale may have built up.	Follow cleaning instructions in book.
Not enough steam pressure.	The dial on the handle may be set too low.	Turn the dial until the desired pressure is reached.
Pump works continuously.	Air in water line.	Press the trigger (on/off) then turn the unit on and keep the trigger pressed down for 30 seconds.
Rapid drop in pressure.	Too much water in the boiler.	Turn the knob on the handle to #4 to release excess water. (Repeat, if necessary).
There is no steam, all the lights remain on and the pump is continuously running.	<ol style="list-style-type: none"> 1. You're using too much steam (pos. 4). 2. Water pump is broken. 	<ol style="list-style-type: none"> 1. Turn off main switch (1) wait 1 minute then turn back and wait for green light (A) to turn on. 2) Contact Reliable Corporation for service.


1100CT Assembly Instructions (SOLD SEPARATELY)

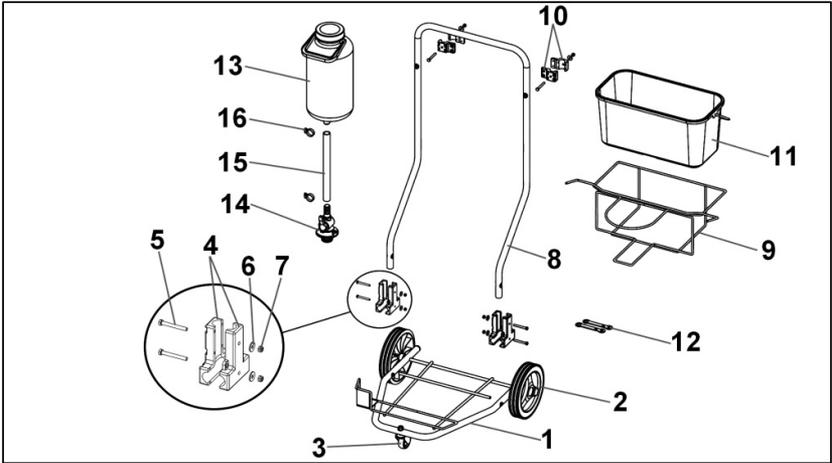


- | | |
|-------------------------|----------------------------------|
| 1. Base Unit | 9. Holder for accessories basket |
| 2. Rear Wheel (2x) | 10. Basket clamp (2x) |
| 3. Frontal Wheel | 11. Accessories basket |
| 4. Base Unit Clamp (2x) | 12. Wrench (2x) |
| 5. Screw (6x) | 13. Water Reservoir |
| 6. Washer (6x) | 14. Steam Cleaner Cap |
| 7. Nut (6x) | 15. Connection Pipe |
| 8. Handle | 16. Metal band for pipe (2x) |

Note: Always remove accessories basket (11) before steam cleaner, otherwise the trolley could fall back.


1. Ensure that all the components present in exploded view of your trolley is present in the box.
2. Use the two Wrench (12) to unscrew the upper nuts (7) of the base unit clamp (4) (both right/left sides) and remove the two correspondents screws (5) and the two washers (6).

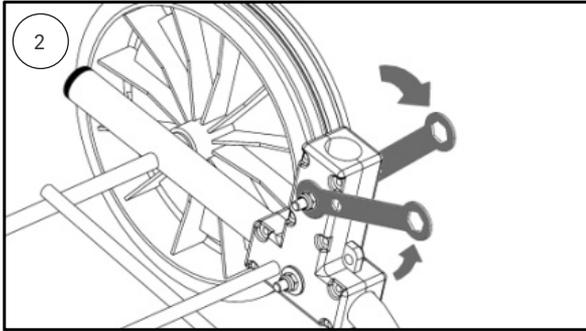


3. Put into the base unit clamp the two ends of the handle (8), then place the two screws and nuts removed into previous point and tighten it by taking care of the position of the washers (6).

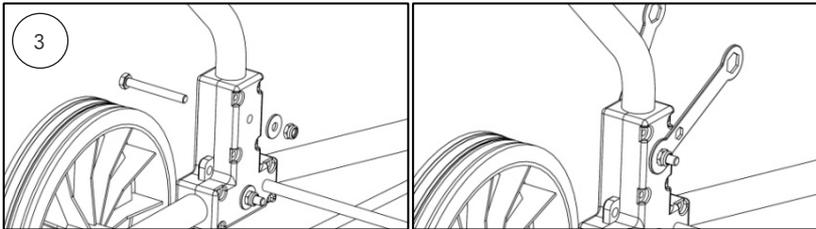


4. Slide the holder for accessories basket (9) into the position between the two basket clamps (10) and tight the two nuts.

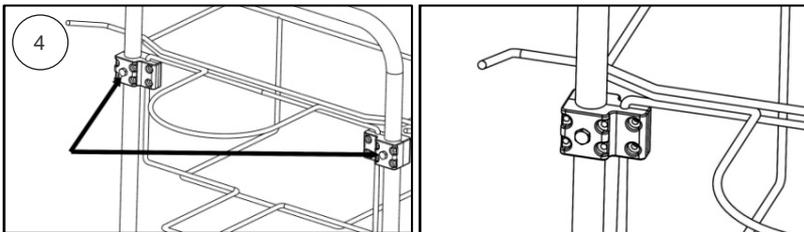

5. Place the steam cleaner on the trolley and make sure that frontal wheels of the machine are on its right position (1).
6. Place accessories basket (11) into the holder (9).
7. Screw the Steam Cleaner Cap (14) on machine's water tank.

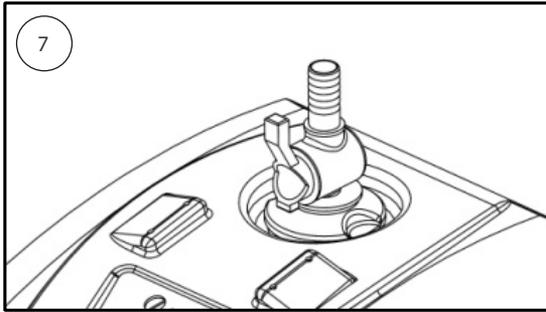

8. Put water reservoir (13) into the holder, then fit the pipe (15) on the steam clean cap (14) and on the hose tail of water reservoir, tight the metal band (16) on both hose tails.

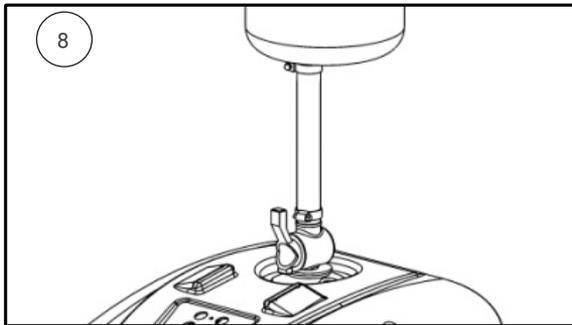



Steam cleaning is a proven method of disinfection. The Reliable Brio Pro 1000CC has been certified to kill the following microorganisms:

Organism	Organism Type	Exposure Time	Percentage of Organisms Killed*
VRE (vancomycin-resistant enterococcus)	Bacteria	2 seconds	>99.9997
staphylococcus aureus	Bacteria	2 seconds	>99.9995
pseudomonas aeruginosa	Bacteria	2 seconds	>99.99
listeria monocytogenes	Bacteria	2 seconds	>99.999
e coli	Bacteria	2 seconds	>99.999
salmonella enterica serovar choleraesuis	Bacteria	2 seconds	>99.9997
MRSA (methicillin resistant staphylococcus aureus)	Bacteria	2 seconds	>99.999999
klebsiella pneumonia	Bacteria	2 seconds	>99.9999
shigella flexneri	Bacteria	2 seconds	>99.99999
clostridium difficile (vegetative and endospores)	Bacteria	2 seconds	>99.9999
candida albicans	Fungus	2 seconds	>99.999
trichophyton mentagrophy	Fungus	2 seconds	>99.998
aspergillus niger	Fungus	2 seconds	>99.999

* Quantitative hard surface kill-time based on ASTM-E1 153 as tested by a leading independent certified test laboratory, EMSL Analytical. Results listed are for Brio Pro 1000CC.

(EMSL Analytical is an independent, 3rd party testing laboratory providing quality lab services under the same private ownership since 1981. EMSL Analytical operates over thirty laboratories nationwide in the US and Canada. The company has an extensive list of accreditations from leading organizations, as well as state and federal regulating bodies.)

For more information or to receive the Certificate of Analysis for any of the above bacteria or fungi please contact Reliable Corporation at support@reliablecorporation.com 1 800 268 1649

Reliable Corporation
Lifetime Product Warranty Policy
For Pressurized Steam Boiler Tanks



Warranty Coverage

Reliable Corporation ("Reliable") offers a lifetime warranty to the original purchaser of its pressurized steam boiler tanks (the "Reliable Boiler Tank"). This warranty covers defects in materials and workmanship when used for normal, intended purposes.

What's Covered

- **Replacement or Repair:** If the Reliable Boiler Tank is defective due to materials or workmanship, Reliable will repair or replace it at no cost (excluding shipping).
- If the original product is unavailable, we will replace it with a similar or higher-value product.
- Replacements and repairs will be either new or refurbished to be functionally equivalent to new.

What's Not Covered

- Damage from improper installation, misuse, accidents, or natural disasters.
- Wear and tear from unreasonable use, unauthorized repairs, or modifications.
- Indirect or consequential damages, including third-party claims.

How to Claim

To obtain a repair or replacement:

1. Contact customer support at support@reliablecorporation.com or 1-800-268-1649.
2. Provide an original receipt that shows you are the original purchaser and that the product was bought from Reliable or an authorized dealer.
3. You will receive a Return Authorization (RA#) and instructions on how to return the product.

Warranty Limitations

- This warranty is the only one that applies to the Reliable Boiler Tank and overrides any other terms or documents.
- It cannot be altered except by Reliable, in writing.

For more information, visit our website at reliablecorporation.com.

Warranty Coverage

Reliable Corporation ("Reliable") offers a **one-year** warranty for the original purchaser of its products. This warranty covers defects in material and workmanship, provided the product is used and maintained correctly.

What's Covered

- **Repair or Replacement:** If a product is defective due to workmanship or materials, Reliable will repair or replace it.
- If the defective product is no longer available, we will replace it with a similar product of equal or greater value.
- Replacements or repairs may be new or refurbished.

What's Not Covered

- Damage from improper installation, misuse, accidents, or natural disasters.
- Wear and tear from normal use.
- Damage caused by unauthorized repairs or modifications.
- Products without serial numbers or those altered in any way.
- Indirect, consequential, or incidental damages.

How to Claim

To claim a repair or replacement:

1. Contact customer support at support@reliablecorporation.com or 1-800-268-1649.
2. Provide an original receipt showing you are the original purchaser, and that the product was bought from Reliable or an authorized dealer.
3. You will receive a Return Authorization (RA#) and shipping instructions.

Warranty Limitations

This is the only warranty for Reliable products and overrides any other warranty terms.

For more information, visit our website at reliablecorporation.com.



15012026